


**40 DFAV
Part Number
18950.051**

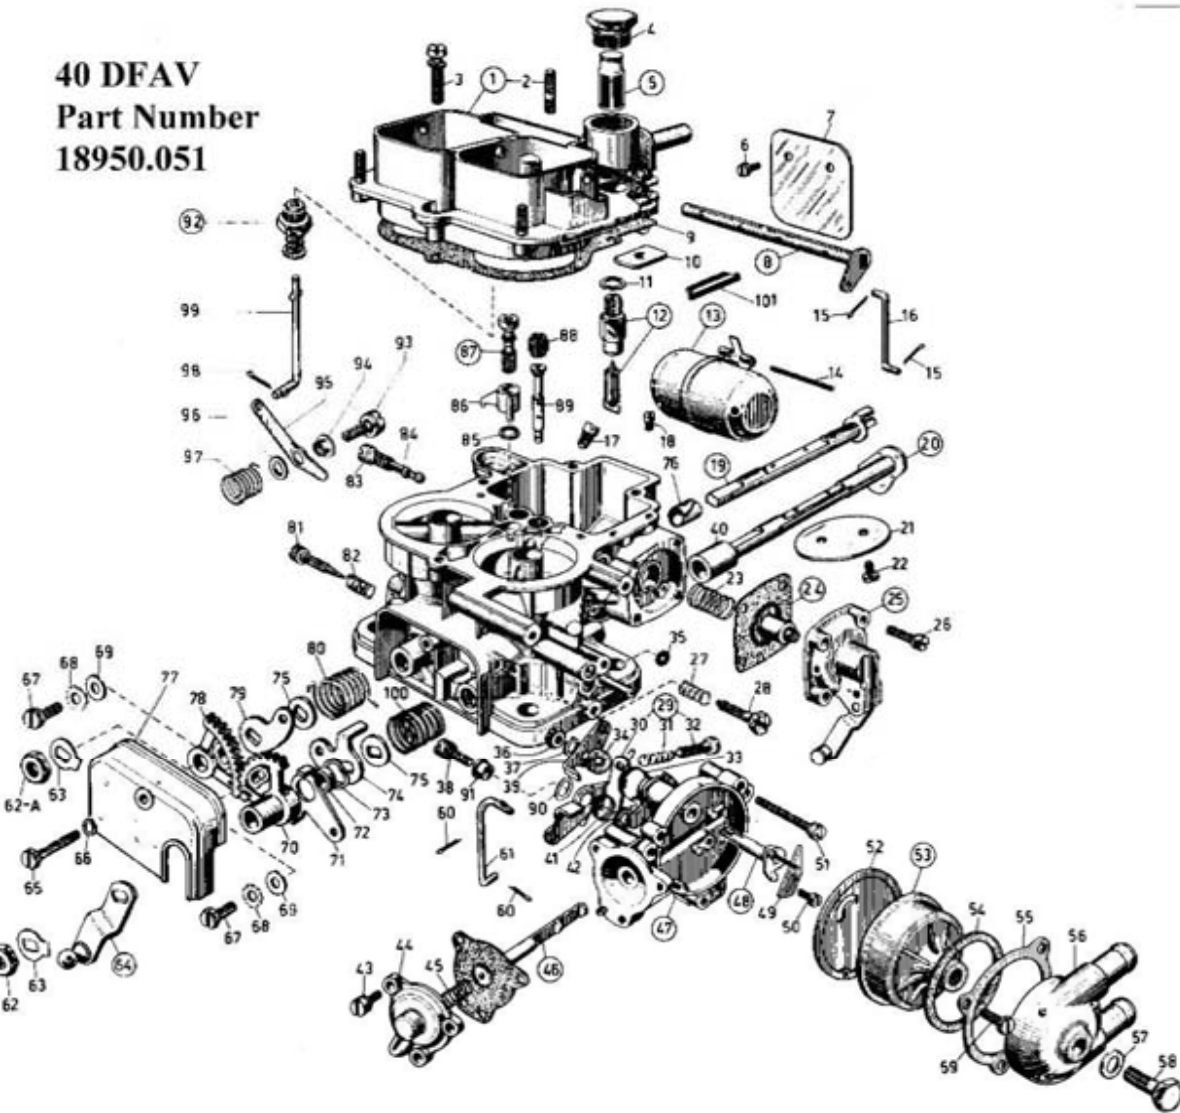

**PARTS LIST
TYPE 40 DFAV – PART NO. 18950.051**

Dia No.	Qty. Req'd	Description	Part Number	Dia No.	Qty. Req'd	Description	Part Number
1	1	Carb Top Cover	31716.092	51	3	Screw	64700.008
2	3	Stud Bolt	64955.002	52	1	Gasket	41640.005
3	5	Top Cover Screw	64700.005	53	1	Thermostat Assy	57804.005
4	1	Strainer Inspection Plug	61002.018	54	1	Gasket	41555.001
5	1	Stainer	37022.010	55	1	Ring	52135.006
6	4	Screw	64525.003	56	1	Water Chamber	32444.002
7	2	Plate	64010.007	57	1	Washer	41530.002
8	1	Shaft & Lever Assembly	10020.204	58	1	Bolt	64615.001
9	1	Top Cover Gasket	41705.031	59	3	Screw	64615.005
10	1	Dust Seal	52135.010	60	2	Split Pin	32610.005
11	1	Gasket	83102.070	61	1	Rod	61280.041
12	1	Needle & Seat	79519.*	62	2	Nut	34715.014
13	1	Float	41015.004	63	2	Lock Washer	55520.002
14	1	Float Pin	52000.015	64	1	Lever	45027.089
15	2	Split Pin	32610.005	65	1	Screw	Not serviced
16	1	Rod	61280.004	66	1	Washer	55525.007
17	2	Main Jet	73801.*	67	2	Screw	Not serviced
18	1	Plug	61015.005	68	2	Washer-External Tooth	55535.001
19	1	Shaft	10015.482	69	2	Washer	Not serviced
20	1	Shaft Assembly	10015.430	70	1	Primary Gear Lever (Right Hand)	58202.011
21	2	Plate	Not Serviced	71	1	Lever	Not serviced
22	4	Screw	64520.027	72	1	Bushing	Not serviced
23	1	Accelerator Pump Spring	47600.107	73	1	Washer	55530.002
24	1	Diaphragm Assembly	47407.027	74	1	Lever	Not serviced
25	1	Cover Assy	32486.015	75	2	Washer	55555.016
26	4	Screw	64700.004	76	4	Shaft Bushing	52130.010
27	1	Spring	47600.007	77	1	Cover	Not serviced
28	1	Screw	Not Serviced	78	1	Geared Carb Sector (Left Hand)	58202.003
29	1	Lever Assembly --Including	Not Serviced	79	1	Lever	Not serviced
30	1	--Lever	Not Serviced	80	1	Left Shaft Return Spring	47610.012
31	1	--Spring	47600.007	81	2	Needle Screw	64750.001
32	1	--Screw	64590.001	82	2	Spring	47600.007
33	1	Spring	Not Serviced	83	2	Idle Jet Holder	52570.005
34	1	Spacer	55555.006	84	2	Idle Jet	74403.*
35	1	O-Ring Seal	41565.008	85	1	Gasket	41540.014
36	1	Nut	34705.001	86	1	Accelerator Pump Jet	76212.*
37	1	Washer-Spring	Not Serviced	87	1	Accelerator Pump Valve Assembly	64290.005
38	1	Screw	64700.014	88	2	Air Corrector Jet	77201.*
39	1	Lever	Not Serviced	89	2	Emulsion Tube	61440.*
40	1	Spacer	12750.016	90	1	Washer	55530.005
41	1	Spring	47610.018	91	1	Bushing	12765.005
42	1	Washer	55510.013	92	1	Power Valve	Not serviced
43	3	Screw	64700.007	93	1	Lever Fixing Screw	64700.014
44	1	Cover	Not Serviced	94	1	Bushing For Lever	12775.017
45	1	Spring	Not Serviced	95	1	Valve Control Lever	Not serviced
46	1	Vacuum Diaphragm & Shaft Assy	47407.008	96	1	Washer For Lever	Not serviced
47	1	Body Assembly	Not Serviced	97	1	Spring For Lever	47610.033
48	1	Shaft & Lever Assy	10085.001	98	1	Split Pin For Rod	32610.005
49	1	Plate	52135.015	99	1	Valve Control Rod	Not serviced
50	1	Screw	Not Serviced	100	1	Right Shaft Return Spring	Not serviced
		*Calibrated Parts Require 3 Digits To Complete Part Number		101	1	Dust Seal Plug	61070.002
		See Calibrated Parts Section For Sizes					